PCIM-DAS16JR/16

Analog and Digital I/O Board

User's Guide

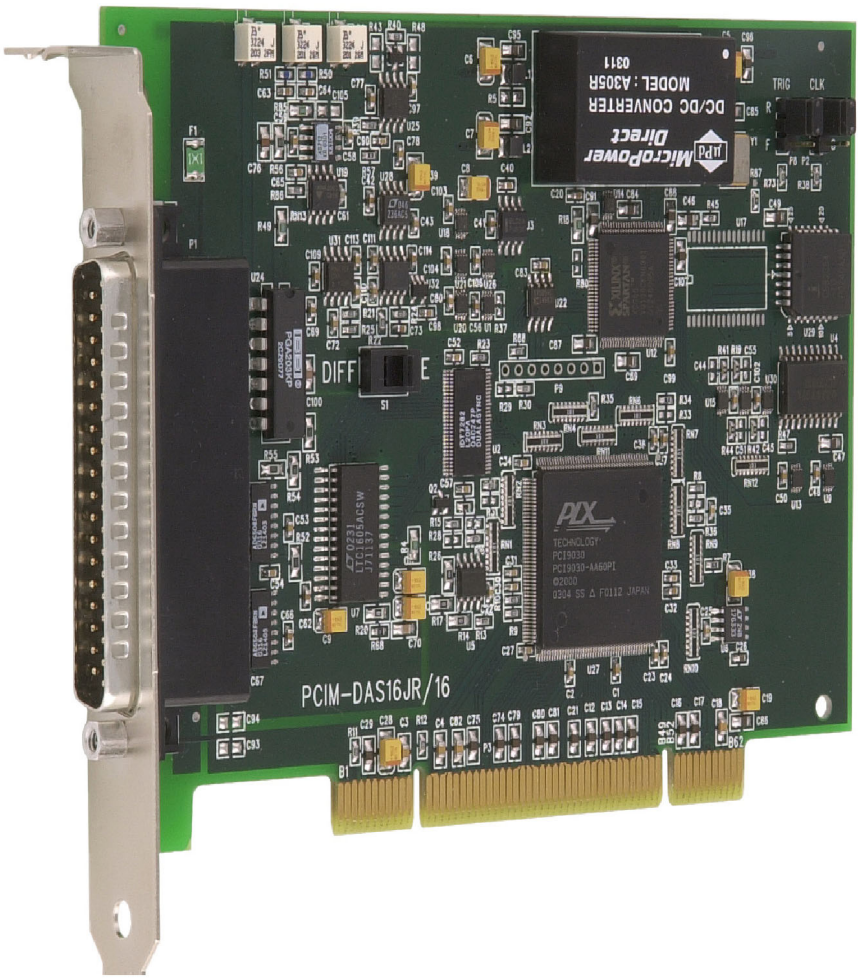

MEASUREMENT COMPUTING™

PCIM-DAS16JR/16

Analog & Digital I/O Board

User's Guide

MEASUREMENT COMPUTING

Document Revision 3, May, 2006
© Copyright 2006, Measurement Computing Corporation

Your new Measurement Computing product comes with a fantastic extra —

Management committed to your satisfaction!

Refer to www.mccdaq.com/execteam.html for the names, titles, and contact information of each key executive at Measurement Computing.

Thank you for choosing a Measurement Computing product—and congratulations! You own the finest, and you can now enjoy the protection of the most comprehensive warranties and unmatched phone tech support. It's the embodiment of our two missions:

- To offer the highest-quality, computer-based data acquisition, control, and GPIB hardware and software available—at the best possible price.
- To offer our customers superior post-sale support—FREE. Whether providing unrivaled telephone technical and sales support on our latest product offerings, or continuing that same first-rate support on older products and operating systems, we're committed to you!

Lifetime warranty: Every hardware product manufactured by Measurement Computing Corporation is warranted against defects in materials or workmanship for the life of the product. Products found defective are repaired or replaced promptly.

Lifetime Harsh Environment Warranty®: We will replace any product manufactured by Measurement Computing Corporation that is damaged (even due to misuse) for only 50% of the current list price. I/O boards face some tough operating conditions—some more severe than the boards are designed to withstand. When a board becomes damaged, just return the unit with an order for its replacement at only 50% of the current list price. We don't need to profit from your misfortune. By the way, we honor this warranty for any manufacturer's board that we have a replacement for.

30 Day Money Back Guarantee: You may return any Measurement Computing Corporation product within 30 days of purchase for a full refund of the price paid for the product being returned. If you are not satisfied, or chose the wrong product by mistake, you do not have to keep it. Please call for an RMA number first. No credits or returns accepted without a copy of the original invoice. Some software products are subject to a repackaging fee.

These warranties are in lieu of all other warranties, expressed or implied, including any implied warranty of merchantability or fitness for a particular application. The remedies provided herein are the buyer's sole and exclusive remedies. Neither Measurement Computing Corporation, nor its employees shall be liable for any direct or indirect, special, incidental or consequential damage arising from the use of its products, even if Measurement Computing Corporation has been notified in advance of the possibility of such damages.

Trademark and Copyright Information

TracerDAQ, Universal Library, *Insta*Cal, Harsh Environment Warranty, Measurement Computing Corporation, and the Measurement Computing logo are either trademarks or registered trademarks of Measurement Computing Corporation.

Windows, Microsoft, and Visual Studio are either trademarks or registered trademarks of Microsoft Corporation

LabVIEW is a trademark of National Instruments.

CompactFlash is a registered trademark of SanDisk Corporation.

All other trademarks are the property of their respective owners.

Information furnished by Measurement Computing Corporation is believed to be accurate and reliable. However, no responsibility is assumed by Measurement Computing Corporation neither for its use; nor for any infringements of patents or other rights of third parties, which may result from its use. No license is granted by implication or otherwise under any patent or copyrights of Measurement Computing Corporation.

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form by any means, electronic, mechanical, by photocopying, recording, or otherwise without the prior written permission of Measurement Computing Corporation.

Notice

Measurement Computing Corporation does not authorize any Measurement Computing Corporation product for use in life support systems and/or devices without prior written consent from Measurement Computing Corporation. Life support devices/systems are devices or systems which, a) are intended for surgical implantation into the body, or b) support or sustain life and whose failure to perform can be reasonably expected to result in injury. Measurement Computing Corporation products are not designed with the components required, and are not subject to the testing required to ensure a level of reliability suitable for the treatment and diagnosis of people.

Table of Contents

Preface
About this User's Guide vi
What you will learn from this user's guide vi
Conventions in this user's guide vi
Where to find more information vi

Chapter 1
Introducing the PCIM-DAS16JR/16 1-1
Overview: PCIM-DAS16JR/16 features 1-1
Software features 1-1

Chapter 2
Installing the PCIM-DAS16JR/16 2-1
What comes with your PCIM-DAS16JR/16 shipment? 2-1
Hardware 2-1
Additional documentation 2-1
Optional components 2-2
Unpacking the PCIM-DAS16JR/16 2-2
Installing the software 2-2
Default hardware configuration 2-2
Channel mode switch 2-3
A/D trigger edge jumper 2-4
Clock frequency jumper 2-4
Installing the PCIM-DAS16JR/16 2-5
Connecting the board for I/O operations 2-5
Connectors, cables – main I/O connector 2-5
Pin out – main I/O connector 2-6
Cabling 2-6
Field wiring, signal termination, and signal conditioning 2-7

Chapter 3
Programming and Developing Applications 3-1
Programming languages 3-1
Packaged applications programs 3-1
Register-level programming 3-1

Chapter 4
Functional Details 4-1
Analog inputs 4-2
Burst mode 4-2
Digital I/O 4-3
Counter/timer I/O 4-3

Chapter 5
Calibrating the PCIM-DAS16JR/16 5-1
Calibrating the A/D & D/A converters 5-1
Required equipment 5-1

Chapter 6
Specifications 6-1
Power consumption 6-1
Analog input 6-1

Accuracy 6-2
Analog input drift 6-2
Noise performance 6-2
Settling time 6-3
Digital input / output 6-3
Main connector 6-3
Counter 6-4
Environmental 6-4
Mechanical 6-4
Main connector and pin out 6-4
8-channel differential mode pin out 6-5
16-channel single-ended mode pin out 6-5

About this User's Guide

What you will learn from this user's guide

This user's guide explains how to install, configure, and use the PCIM-DAS16JR/16 so that you get the most out of its analog, digital, and counter I/O features.

This user's guide also refers you to related documents available on our web site, and to technical support resources.

Conventions in this user's guide

For more information on …

Text presented in a box signifies additional information and helpful hints related to the subject matter you are reading.

Caution! Shaded caution statements present information to help you avoid injuring yourself and others, damaging your hardware, or losing your data.

<#:#> Angle brackets that enclose numbers separated by a colon signify a range of numbers, such as those assigned to registers, bit settings, etc.

bold text **Bold** text is used for the names of objects on the screen, such as buttons, text boxes, and check boxes. For example:
1. Insert the disk or CD and click the **OK** button.

italic text *Italic* text is used for the names of manuals and help topic titles, and to emphasize a word or phrase. For example:
The *Insta*Cal® installation procedure is explained in the *Quick Start Guide*.
Never touch the exposed pins or circuit connections on the board.

Where to find more information

The following electronic documents provide information that can help you get the most out of your PCIM-DAS16JR/16 hardware.

- MCC's *Specifications: PCIM-DAS16JR/16* (the PDF version of the Electrical Specification Chapter in this guide) is available on our web site at www.mccdaq.com/pdfs/PCIM-DAS16Jr-16.pdf.
- MCC's *Quick Start Guide* is available on our web site at www.mccdaq.com/PDFmanuals/DAQ-Software-Quick-Start.pdf.
- MCC's *Guide to Signal Connections* is available on our web site at www.mccdaq.com/signals/signals.pdf.
- MCC's *Universal Library User's Guide* is available on our web site at www.mccdaq.com/PDFmanuals/sm-ul-user-guide.pdf.
- MCC's *Universal Library Function Reference* is available on our web site at www.mccdaq.com/PDFmanuals/sm-ul-functions.pdf.
- MCC's *Universal Library for LabVIEW™ User's Guide* is available on our web site at www.mccdaq.com/PDFmanuals/SM-UL-LabVIEW.pdf.

PCIM-DAS16JR/16 User's Guide (this document) is also available on our web site at www.mccdaq.com/PDFmanuals/PCIM-DAS16Jr-16.pdf.

Introducing the PCIM-DAS16JR/16

Overview: PCIM-DAS16JR/16 features

This manual explains how to install and use the PCIM-DAS16JR/16 board. The PCIM-DAS16JR/16 is a multifunction measurement and control board designed to operate in computers with PCI accessory slots. This board can be used for applications such as data acquisition, system timing, and industrial process control.

The PCIM-DAS16JR/16 provides the following features:

- Eight differential or 16 single-ended analog inputs
- 16-bit A/D resolution
- 100 kHz sample rate
- Eight TTL-compatible digital I/O channels
- Three 16-bit down counters
- 37-pin high density I/O connector
- Universal PCI bus (3.3V/5V 32-bit 33 MHz)

The analog input mode is switch-selectable for eight differential or 16 single-ended analog inputs. Analog input ranges are selectable with software as bipolar or unipolar. Bipolar input ranges are ±10V, ±5V, ±2.5V and ±1.25V. Unipolar input ranges are 0 to 10V, 0 to 5V, 0 to 2.5V and 0 to 1.25V.

The PCIM-DAS16JR/16 board is equipped with an 82C54 counter chip. This chip contains three 16-bit down counters that provide clock, gate, and output connections.

Software features

For information on the features of *Insta*Cal and the other software included with your PCIM-DAS16JR/16, refer to the *Quick Start Guide* that shipped with your device. The *Quick Start Guide* is also available in PDF at www.mccdaq.com/PDFmanuals/DAQ-Software-Quick-Start.pdf.

Check www.mccdaq.com/download.htm for the latest software version or versions of the software supported under less commonly used operating systems.

Installing the PCIM-DAS16JR/16

What comes with your PCIM-DAS16JR/16 shipment?

The following items are shipped with the PCIM-DAS16JR/16.

Hardware

- PCIM-DAS16JR/16

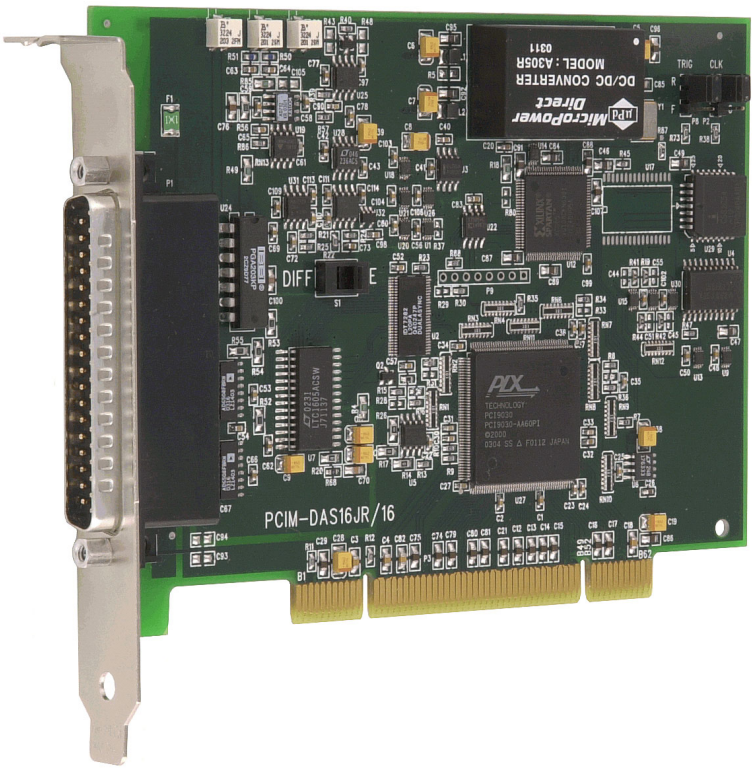

Additional documentation

In addition to this hardware user's guide, you should also receive the *Quick Start Guide* (available in PDF at www.mccdaq.com/PDFmanuals/DAQ-Software-Quick-Start.pdf). This booklet supplies a brief description of the software you received with your PCIM-DAS16JR/16 and information regarding installation of that software. Please read this booklet completely before installing any software or hardware.

Optional components

If you ordered any of the following products with your board, they should be included with your shipment.

- Cables

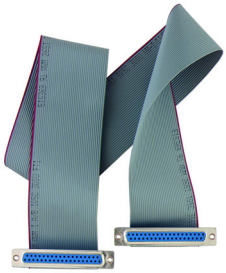

C37FF-x

C37FFS-x

- Signal termination and conditioning accessories

  MCC provides signal termination products for use with the PCIM-DAS16JR/16. Refer to the "Field wiring, signal termination and signal conditioning" section on page 2-7 for a complete list of compatible accessory products.

Unpacking the PCIM-DAS16JR/16

As with any electronic device, you should take care while handling to avoid damage from static electricity. Before removing the PCIM-DAS1602/16 from its packaging, ground yourself using a wrist strap or by simply touching the computer chassis or other grounded object to eliminate any stored static charge.

If any components are missing or damaged, notify Measurement Computing Corporation immediately by phone, fax, or e-mail:

- Phone: 508-946-5100 and follow the instructions for reaching Tech Support.
- Fax: 508-946-9500 to the attention of Tech Support
- Email: techsupport@mccdaq.com

Installing the software

Refer to the *Quick Start Guide* for instructions on installing the software on the *Measurement Computing Data Acquisition Software CD*. This booklet is available in PDF at www.mccdaq.com/PDFmanuals/DAQ-Software-Quick-Start.pdf.

Configuring the PCIM-DAS16JR/16

The PCIM-DAS16JR/16 board has one switch and two jumpers mounted on it. Before installing the PCIM-DAS16JR/16 in the computer, verify that the board is configured with the settings that you want. Factory default settings are listed in Table 2-1.

Table 2-1. Switch/jumper factory-configured defaults

Board label	Switch/jumper description	Default setting
S1	Channel mode switch	8 channel (diff)
P8	A/D Trigger edge jumper	Rising edge
P2	Clock frequency jumper	1 MHz

The locations of each switch and jumper are shown in Figure 2-1.

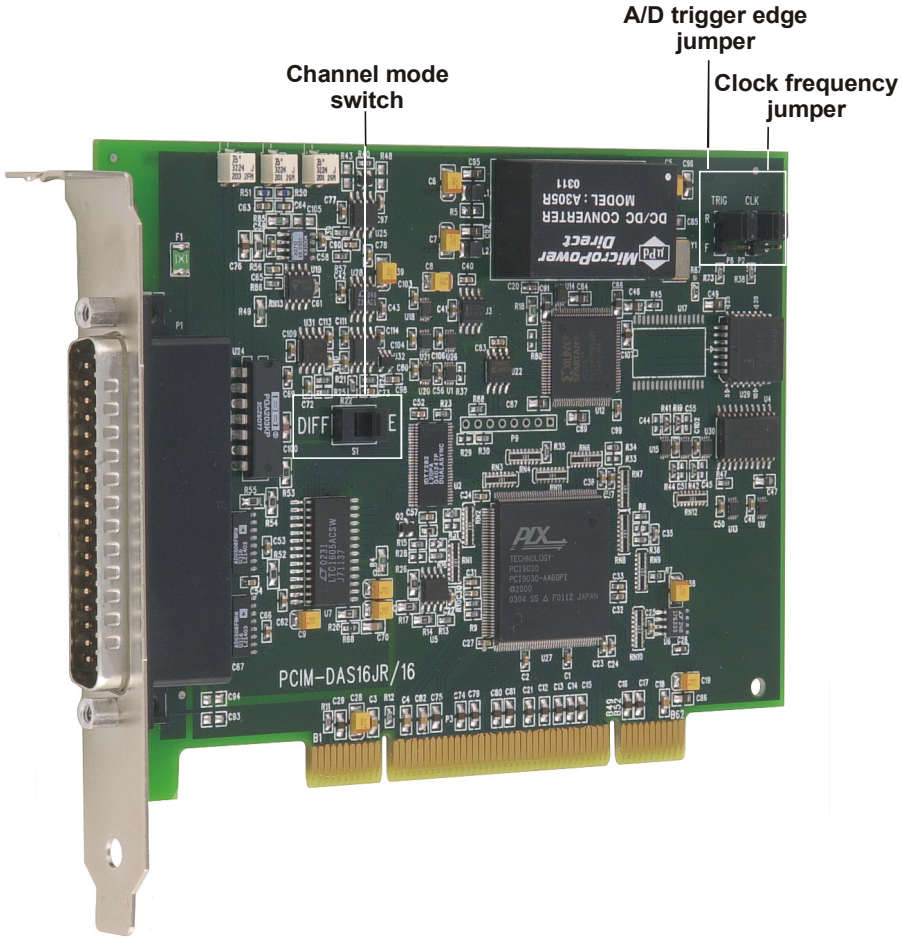

Figure 2-1. PCIM-DAS16JR/16 switch and jumper locations

Instructions on how to change the configuration of each jumper and switch are shown on the following pages.

Channel mode switch

Switch **S1** configures the analog inputs of the PCIM-DAS16JR/16 as either eight differential channels or 16 single-ended channels. Set the switch to single-ended mode if you have more than eight analog inputs to sample. Setting the switch to differential mode allows up to 10 volts of common mode (ground loop) rejection and provides better noise immunity.

The channel mode switch is factory-configured for eight differential inputs (see Figure 2-2.) To configure for 16 single-ended channels, set this switch to "**SE**".

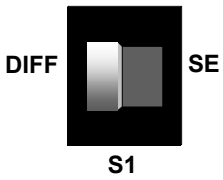

Figure 2-2. Channel mode switch

A/D trigger edge jumper

Jumper **P8** configures the edge to initiate the A/D conversion with. The options are either rising or falling edge. The A/D trigger edge jumper is factory-configured for rising edge. Figure 2-3 shows the jumper position for each configuration option.

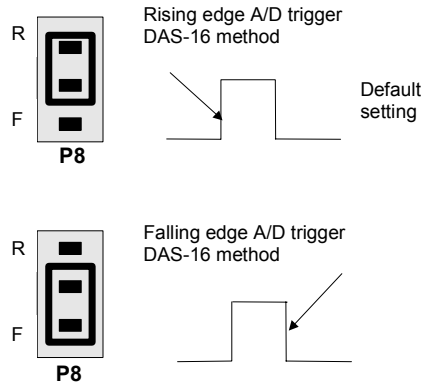

Figure 2-3. A/D trigger edge jumper

For compatibility with all third-party packages, DAS-16 software, and PCIM-DAS16JR/16 software, leave this jumper set to the default rising edge position.

If you are using the PCIM-DAS16JR/16 board in an application that is designed for compatibility with the Keithley MetraByte DAS-1600 board, configure the trigger edge jumper for falling edge.

Clock frequency jumper

Jumper **P2** configures the frequency of the square wave that is used as a clock by the A/D pacer circuitry. This pacer circuitry controls the sample timing of the A/D.

You can configure the frequency for 10 MHz or 1 MHz. The clock frequency jumper is factory-configured for 1 MHz, as shown in Figure 2-4.

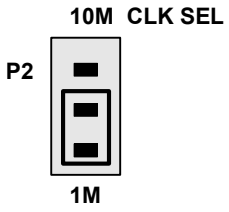

Figure 2-4. Clock frequency jumper

Configure this jumper for 10 MHz, unless you have reason to do otherwise.

The internal pacer output is also available at pin 20

The internal pacer output that drives the A/D converter is also available at pin 20 (CTR 3 Output) on the board's main I/O connector (see Figure 2-5).

Installing the PCIM-DAS16JR/16

After you configure the board's switches and jumpers, install the PCIM-DAS16JR/16 into your computer. To install your board, follow the steps below:

Install the MCC DAQ software before you install your board

The driver needed to run your board is installed with the MCC DAQ software. Therefore, you need to install the MCC DAQ software before you install your board. Refer to the *Quick Start Guide* for instructions on installing the software.

1. Turn your computer off, open it up, and insert your board into any available PCI slot.
2. Close your computer and turn it on.

   If you are using an operating system with support for plug-and-play (such as Windows 2000 or Windows XP), a dialog box pops up as the system loads indicating that new hardware has been detected. If the information file for this board is not already loaded onto your PC, you will be prompted for the disk containing this file. The MCC DAQ software contains this file. If required, insert the *Measurement Computing Data Acquisition Software* CD and click **OK**.
3. To test your installation and configure your board, run the *Insta*Cal utility installed in the previous section. Refer to the *DAQ Software Quick Start* that came with your board for information on how to initially set up and load *Insta*Cal.

Board configuration with *Insta*Cal

If you change the board configuration with *Insta*Cal, you may have to also physically change the setting of a corresponding switch or jumper on the board. Refer to Default hardware configuration on page 2-2 for specific jumper and switch information.

Allow your computer to warm up for at least 15 minutes before acquiring data. The high speed components used on the board generate heat, and it takes this amount of time for a board to reach steady state if it has been powered off for a significant amount of time.

Connecting the board for I/O operations

Connectors, cables – main I/O connector

Table 2-2 lists the board connectors, applicable cables, and compatible accessory products for the PCIM-DAS16JR/16.

Table 2-2. Board connectors, cables, accessory equipment

Connector type	37 pin male "D" connector
Connector compatibility	Identical to the CIO-DAS16JR/16 connector
Compatible cables	C37FF-x (Figure 2-6) C37FFS-x (Figure 2-7)
Compatible accessory products (with the C37FF-x cable or C37FFs-x cable)	CIO-MINI37 SCB-37 CIO-SSH16

The PCIM-DAS16JR/16 board's main I/O connector is a 37-pin "D" connector that is accessible from the rear of the PC on the expansion back plate. This connector accepts female 37-pin D-type connectors, such as the C37FF-x 37-pin cable (Figure 2-6) or the C37FFS-x 37-pin shielded cable (Figure 2-7).

Analog connections and configuration

General information on analog signal connections and configuration is contained in the *Guide to Signal Connections* (available on our web site at www.mccdaq.com/signals/signals.pdf).

Pin out – main I/O connector

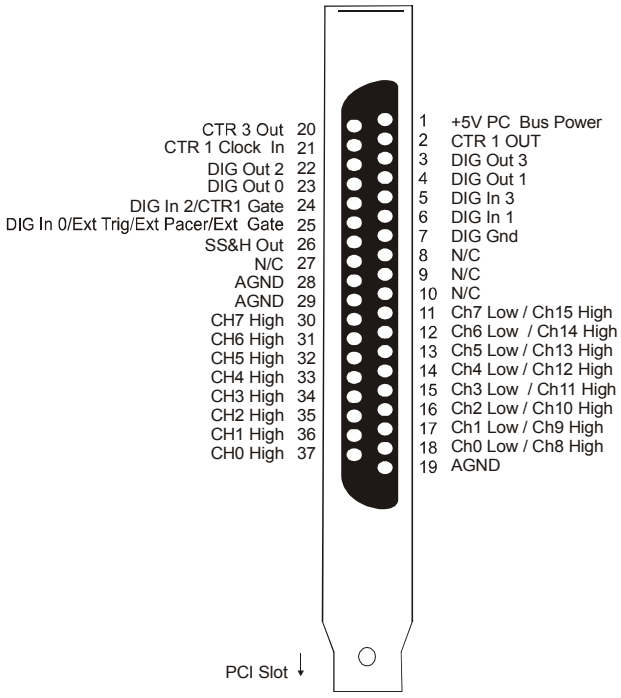

Figure 2-5. Main I/O connector

Cabling

You can use the C37FF-x or C37FFS-x 37-pin cable to connect signals to the PCIM-DAS16JR/16 board.

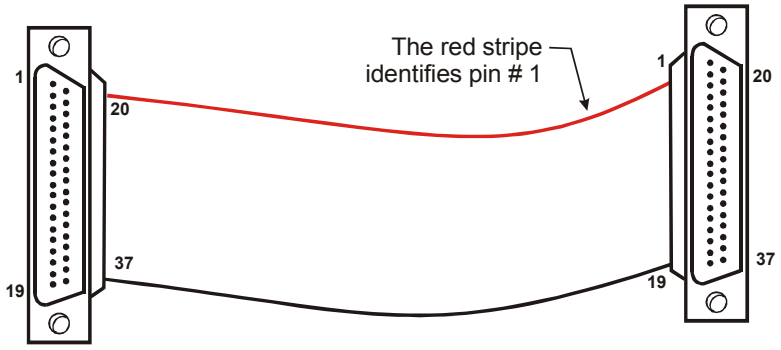

Figure 2-6. C37FF-x cable

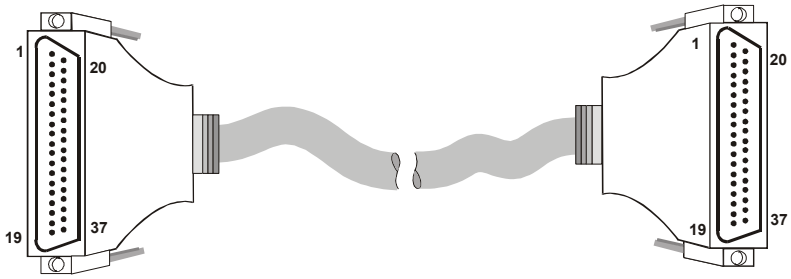

Figure 2-7. C37FFS-x cable

Field wiring, signal termination, and signal conditioning

You can use the following MCC screw terminal boards to terminate field signals and route them into the PCIM-DAS16JR/16 board using a C37FF-x cable or a C37FFS-x cable:

- **CIO-MINI37** – 4 x 4, 37-pin screw terminal board. Details on this product are available at www.mccdaq.com/cbicatalog/cbiproduct.asp?dept_id=102&pf_id=255.
- **SCB-37** – 37-conductor, shielded signal connection/screw terminal box that provides two independent 37-pin connections. Details on this product are available at www.mccdaq.com/cbicatalog/cbiproduct.asp?dept_id=196&pf_id=1166.

For analog signal conditioning, the following signal conditioning board is compatible with the PCIM-DAS16JR/16 board.

- **CIO-SSH16** – 16-channel sample & hold front end board (four channels installed). Details on this product are available from our web site at www.mccdaq.com/cbicatalog/cbiproduct.asp?dept_id=125&pf_id=278.

Programming and Developing Applications

After following the installation instructions in Chapter 2, your board should now be installed and ready for use. Although the board is part of the larger DAS family, in general there may be no correspondence among registers for different boards. Software written at the register level for other DAS models will not function correctly with your board.

Programming languages

Measurement Computing's Universal Library™ provides access to board functions from a variety of Windows programming languages. If you are planning to write programs, or would like to run the example programs for Visual Basic® or any other language, please refer to the *Universal Library User's Guide* (available on our web site at www.mccdaq.com/PDFmanuals/sm-ul-user-guide.pdf).

Packaged applications programs

Many packaged application programs, such as SoftWIRE® and HP-VEE™, now have drivers for your board. If the package you own does not have drivers for the board, please fax or e-mail the package name and the revision number from the install disks. We will research the package for you and advise how to obtain drivers.

Some application drivers are included with the Universal Library package, but not with the application package. If you have purchased an application package directly from the software vendor, you may need to purchase our Universal Library and drivers. Please contact us by phone, fax or e-mail:

- Phone: 508-946-5100 and follow the instructions for reaching Tech Support.
- Fax: 508-946-9500 to the attention of Tech Support
- Email: techsupport@mccdaq.com

Register-level programming

You should use the Universal Library or one of the packaged application programs mentioned above to control your board. Only experienced programmers should try register-level programming. If you need to program at the register level in your application, refer to the *Register Map for the PCIM-DAS16JR/16* (available at www.mccdaq.com/registermaps/RegMapPCIM-DAS16Jr-16.pdf).

Functional Details

The PCIM-DAS16JR/16 provides the following features:

- Eight differential or 16 single-ended 16-bit analog inputs
- Eight high current digital I/O channels
- Three 16-bit down counters

The block diagram shown here illustrates the functionality of the PCIM-DAS16JR/16.

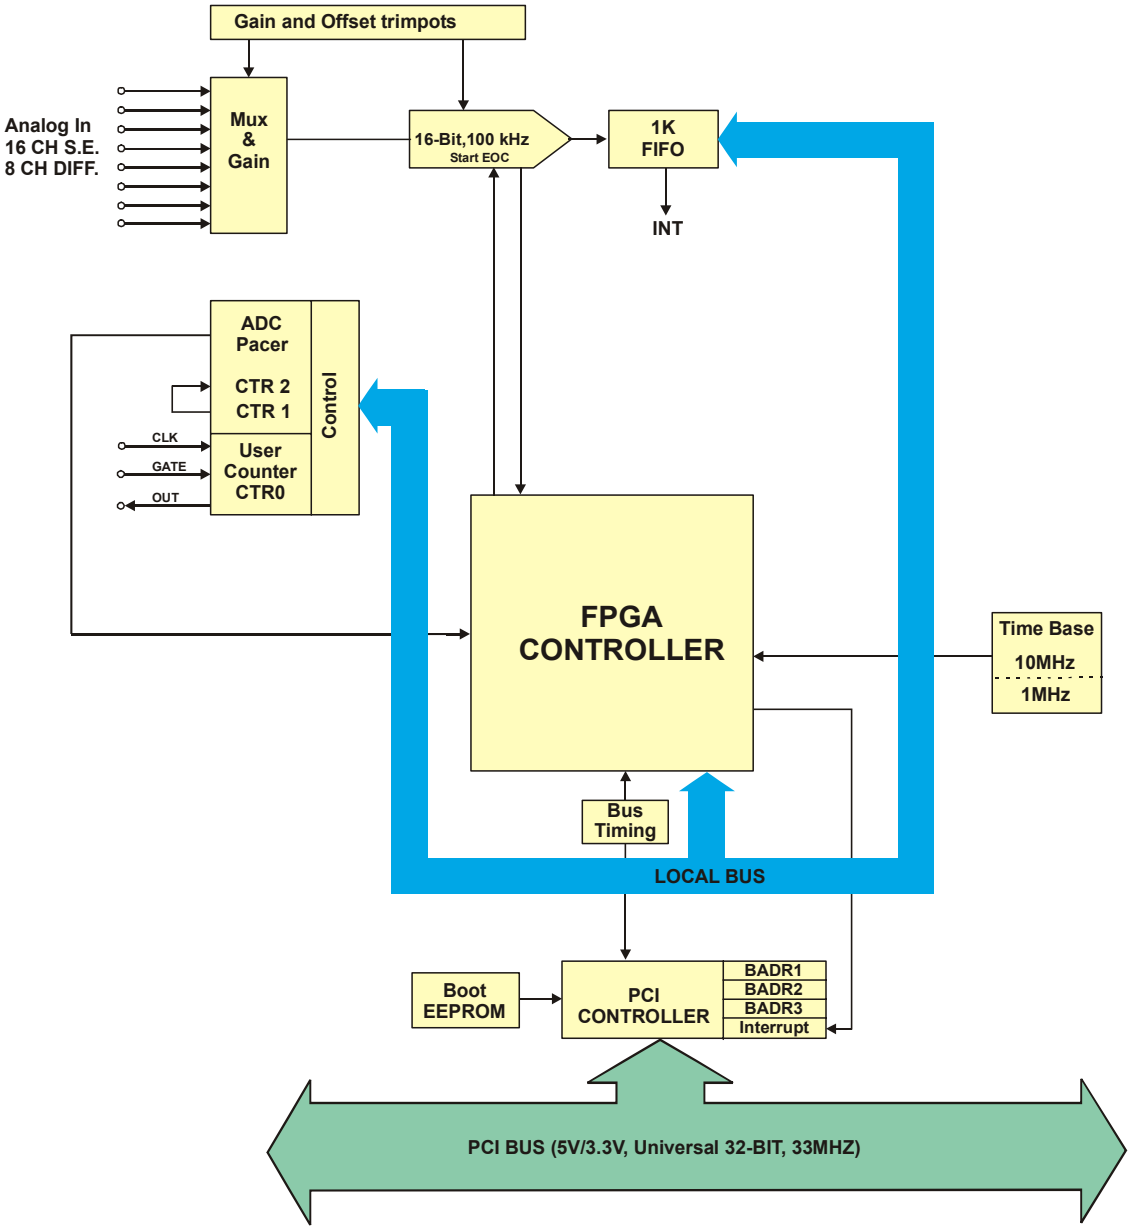

Figure 4-1. PCIM-DAS16JR/16 block diagram

Analog inputs

The analog input mode is switch-selectable for eight differential or 16 single-ended analog inputs. The board offers a 100 kHz maximum sample rate in single and multi-channel scans at any gain setting. A 1024 sample FIFO assures that data taken from the board is transferred into computer memory without the possibility of missed samples. The board has a digital trigger input with software-selectable trigger edge.

Software selects the bipolar/unipolar input configuration and input range. Table 4-1 lists the analog input ranges and resolutions for the available input configurations and gains.

Table 4-1. Input range and resolution

Bipolar Range	Resolution	Unipolar Range	Resolution
±10 V	305 µV	0 to 10 V	153 µV
±5 V	153 µV	0 to 5 V	76.3 µV
±2.5 V	76.3 µV	0 to 2.5 V	38.1 µV
±1.25 V	38.1 µV	0 to 1.25 V	19.1 µV

Burst mode

Channel-to-channel skew results from multiplexing the A/D inputs. Channel skew is defined as the time between consecutive samples. For example, if four channels are sampled at a rate of 1 kHz per channel, the channel skew is 250 µs (1 ms/4).

Burst mode minimizes channel-to-channel skew by clocking the A/D at the maximum rate between successive channels. At the 1-ms pulse, channel 0 is sampled. After 10 µs, channel 1 is sampled. Channel 2 is sampled 10 µs after channel 1 is sampled. Channel 3 is sampled 10 µs after channel 2 is sampled. No samples are then taken until the next 1-ms pulse, when channel 0 is sampled again. In this mode, the rate for all channels is 1 kHz, but the channel-to-channel skew (delay) is now 10 µs. The minimum burst mode skew/delay on this board is 10 µs (refer to Figure 4-2).

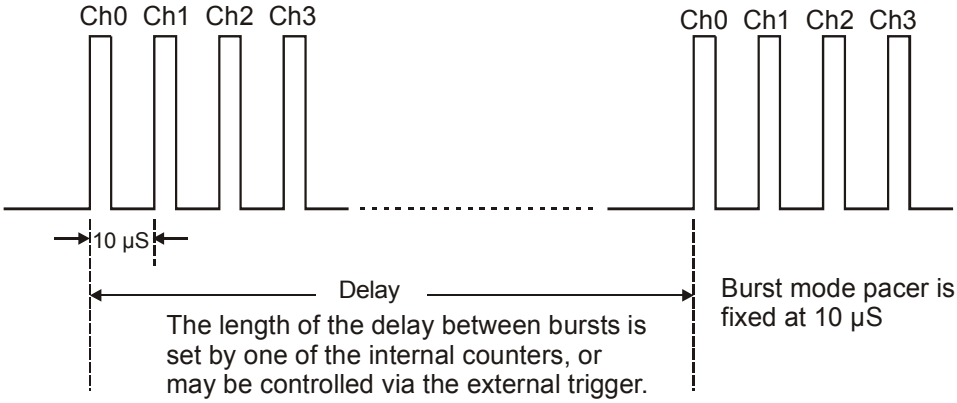
Ch0 Ch1 Ch2 Ch3
Ch0 Ch1 Ch2 Ch3
10 µS
Delay
The length of the delay between bursts is set by one of the internal counters, or may be controlled via the external trigger.
Burst mode pacer is fixed at 10 µS

Figure 4-2. Burst mode timing

Digital I/O

Eight TTL-compatible digital I/O channels are available on the main I/O connector. Four of the digital channels are configured as input. The remaining four are configured as output.

Counter/timer I/O

The PCIM-DAS16JR/16 provides an 82C54 counter chip. This chip contains three 16-bit down counters that provide clock, gate, and output connections. You can connect the counter clock to the on-board 10 MHz crystal oscillator, or leave the counter clock unconnected for user input. For more information on the 82C54, visit our web site at www.mccdaq.com/PDFmanuals/82C54.pdf.

Calibrating the PCIM-DAS16JR/16

The PCIM-DAS16JR/16 is shipped fully calibrated from the factory. For normal environments, you should calibrate your PCIM-DAS16JR/16 board using *Insta*Cal's calibration procedures every six months-to-a year. If frequent variations in temperature or humidity are common, recalibrate at least every three months. It requires less than 20 minutes to calibrate the board using *Insta*Cal.

Calibrating the A/D and D/A converters

*Insta*Cal provides step-by-step on-screen instructions to guide you in calibrating your board. You calibrate the board's A/D converters by applying a known voltage to an analog input channel and adjusting the board's trim pots for offset and gain.

Calibrate the PCIM-DAS16JR/16 for the range you intend to use it in. Slight variations in zero and full scale may result when the range is changed. These variations can be measured and removed in software, if necessary.

Required equipment

To calibrate the PCIM-DAS16JR/16, you need a precision voltage source, or a non-precision source and a 5½ digit digital voltmeter and a few pieces of wire. Use a jeweler's screwdriver to adjust the trim pots. An extender card is not required to calibrate the board.

Specifications

Typical for 25 °C unless otherwise specified.

Specifications in *italic text* are guaranteed by design.

Power consumption

+5V quiescent	500 mA typical, 750 mA max. Does not include the current consumed through 37-pin I/O connector.
+5V available at 37-pin I/O connector	1 A max, protected with re-settable fuse

Analog input

A/D converter type	LTC1605ACSW
Resolution	16 bits
Number of channels	16 single-ended / 8 differential, switch selectable
Input ranges ▪ Gain is software selectable ▪ Unipolar / bipolar polarity is software selectable	±10 V, ±5 V, ±2.5 V, ±1.25 V 0 to 10 V, 0 to 5 V, 0 to 2.5 V, 0 to 1.25 V
A/D Pacing (software programmable)	Internal counter - 82C54. Positive or negative edge, jumper selectable.
	External source (pin 25), Positive or negative edge, software selectable.
	Software polled
A/D Trigger (only available when internal pacing selected, software enable/disable)	External edge trigger (pin 25), Positive or negative edge, software selectable.
A/D Gate (only available when internal pacing selected, software enable/disable)	External gate (pin 25), High or Low level, software selectable.
Simultaneous Sample and Hold trigger	TTL output (pin 26) Logic 0 = Hold, Logic 1 = Sample Compatible with CIO-SSH16
Burst mode	Software selectable option, burst interval = 10 µS
Data transfer	From 1024 sample FIFO via interrupt w/ REPINSW
	Interrupt
	Software polled
Interrupt	INTA# - mapped to IRQn via PCI BIOS at boot-time
Interrupt enable	Programmable through PLX9030
Interrupt polarity	Active high level or active low level, programmable through PLX9030
Interrupt sources (software programmable)	▪ End of conversion ▪ FIFO not Empty ▪ End of Burst ▪ End of Acquisition ▪ FIFO Half Full
A/D conversion time	*10 µs max.*
Throughput	100 kS/s
Input coupling	*DC*
Input bandwidth (all ranges)	*325 kHz*
Common mode range	±10 V min.
CMRR @ 60 Hz	-100 dB typ., -80 dB min
Recommended warm-up time	15 minutes
Input bias current	*±3 nA max.*
Input impedance	*10 M Ohms min.*
Absolute maximum input voltage	*+55/-40V fault protected via input mux.*

Accuracy

Typical accuracy	±2.3 LSB
Absolute accuracy	±5.0 LSB
Accuracy components	
Gain Error	Trimmable by potentiometer to 0
Offset Error	Trimmable by potentiometer to 0
PGA linearity error	*±1.3 LSB typ., ±10.0 LSB max.*
Integral Linearity Error	±0.5 LSB typ., ±3.0 LSB max.
Differential Linearity Error	*±0.5 LSB typ., ±2.0 LSB max.*

Each PCIM-DAS16JR/16 is tested at the factory to ensure the board's overall accuracy error does not exceed ±5 LSB. Total board error is a combination of gain, offset, differential linearity and integral linearity error. The theoretical absolute accuracy of the board may be calculated by summing these component errors. Worst case error is realized only in the unlikely event that each of the component errors are at their maximum level, and causing error in the same direction.

Analog input drift

Range	Analog Input Full-Scale Gain drift	Analog Input Zero drift	Overall Analog Input drift
±10.00 V	2.2 LSB/°C max.	1.8 LSB/°C max.	4.0 LSB/°C max.
±5.000 V	2.2 LSB/°C max.	1.9 LSB/°C max.	4.1 LSB/°C max.
±2.500 V	2.2 LSB/°C max.	2.0 LSB/°C max.	4.2 LSB/°C max.
±1.250 V	2.2 LSB/°C max.	2.3 LSB/°C max.	4.5 LSB/°C max.
0 - 10.00 V	4.1 LSB/°C max.	1.9 LSB/°C max.	6.0 LSB/°C max.
0 - 5.000 V	4.1 LSB/°C max.	2.1 LSB/°C max.	6.2 LSB/°C max.
0 - 2.500 V	4.1 LSB/°C max.	2.4 LSB/°C max.	6.5 LSB/°C max.
0 - 1.250 V	4.1 LSB/°C max.	3.0 LSB/°C max.	7.1 LSB/°C max.

Absolute error change per °C temperature change is a combination of the gain and offset drift of many components. The theoretical worst case error of the board may be calculated by summing these component errors. Worst case error is realized only in the unlikely event that each of the component errors are at their maximum level, and are causing error in the same direction.

Noise performance

The following table summarizes the worst case noise performance for the PCIM-DAS16JR/16. Noise distribution is determined by gathering 50000 samples with inputs tied to ground at the PCIM-DAS16JR/16 main connector. Data represents both single-ended and differential modes of operation.

Range	LSBrms	Typical Counts
±10.00 V	1.30	12
±5.000 V	1.30	12
±2.500 V	1.30	12
±1.250 V	1.30	13
0 - 10.00 V	1.80	15
0 - 5.000 V	1.80	15
0 - 2.500 V	1.80	15
0 - 1.250 V	1.80	16

Settling time

Settling time is defined here as the time required for a channel to settle to within a specified accuracy in response to a full-scale (FS) step. Two channels are scanned at a specified rate with a –FS DC signal presented to channel 1 and a +FS DC signal presented to channel 0.

Condition	Range	Accuracy			
			±0.00076% (±4 LSB)	±0.0015% (±8 LSB)	±0.0061% (±16 LSB)
Same range to same range	±10 V	Typ.	400 µS	100 µS	10 µS
	±5 V	Typ.	100 µS	20 µS	10 µS
	±2.5 V	Typ.	60 µS	12 µS	10 µS
	±1.25 V	Typ.	50 µS	10 µS	
	0 to 10 V	Typ.	400 µS	100 µS	10 µS
	0 to 5 V	Typ.	100 µS	20 µS	10 µS
	0 to 2 V	Typ.	60 µS	12 µS	10 µS
	0 to 1.25 V	Typ.	50 µS	10 µS	

Digital input / output

Main connector

Digital output type	5V/TTL compatible
Digital input type	5V/TTL compatible, pulled to logic high via 10 K resistor network
Number of I/O	8
Configuration	4 fixed input, 4 fixed output
Output high voltage	*3.8 volts min. @ -32 mA*
Output low voltage	*0.55 volts max. @ 32 mA*
Input high voltage	*2.0 volts min., 7 volts absolute max.*
Input low voltage	*0.8 volts max., -0.5 volts absolute min.*
Data transfer	Programmed I/O
Power-up / reset state	DIG OUT [3:0] - TTL logic low state

Counter

Counter type	82C54
Configuration	3 down counters, 16-bits each
Counter 1 source (software selectable)	▪ External source from main connector (pin 21*) ▪ 100 kHz internal source
Counter 1 gate	External gate from main connector (pin 24*)
Counter 1 output	Available at main connector (pin 2)
Counter 2 source (jumper selectable at P2)	▪ Internal 1 MHz ▪ Internal 10 MHz
Counter 2 gate (software enable/disable)	External source from main connector (pin 25*)
Counter 2 output	Internal only, chained to counter 3 source
Counter 3 source	Counter 2 output
Counter 3 gate (software enable/disable)	External source from main connector (pin 25*)
Counter 3 output	Available at main connector (pin 20). Programmable as ADC Pacer clock.
Clock input frequency	*10 MHz max.*
High pulse width (clock input)	*30 ns min.*
Low pulse width (clock input)	*50 ns min.*
Gate width high	*50 ns min.*
Gate width low	*50 ns min.*
Input high	*2.0 volts min., 5.5 volts absolute max.*
Input low	*0.8 volts max., -0.5 volts absolute min.*
Output high	*3.0 volts min. @ -2.5 mA*
Output low	*0.4 volts max. @ 2.5 mA*
Crystal oscillator frequency	10 MHz
Frequency accuracy	50 ppm

* Pins 21, 24, and 25 are pulled to logic high via 10 K resistors.

Environmental

Operating temperature range	0 to 70 °C
Storage temperature range	-40 to 100 °C
Humidity	0 to 95% non-condensing

Mechanical

Card dimensions	PCI half card: 136.5 mm (L) x 106.9 mm (W) x 11.65 mm (H)
Form factor	Universal PCI keying. Compatible with 3.3 V/5 V 32-bit, 33 MHz back planes.

Main connector and pin out

Connector type	37-pin male "D" connector
Connector compatibility	Identical to the CIO-DAS16JR/16 connector
Compatible accessory products	CIO-MINI37 CIO-SCB37 CIO-SSH-16
Compatible cables	C37FF-x C37FFS-x

8-channel differential mode pin out

Pin	Signal Name	Pin	Signal Name
1	+5V PC BUS POWER	20	CTR 3 OUT
2	CTR 1 OUT	21	CTR 1 CLOCK IN
3	DIG OUT 3	22	DIG OUT 2
4	DIG OUT 1	23	DIG OUT 0
5	DIG IN 3	24	DIG IN 2 / CTR1 GATE
6	DIG IN 1	25	DIG IN 0 / EXT TRIG / EXT PACER / EXT GATE
7	DIG GND	26	SS&H OUT
8	NC	27	NC
9	NC	28	AGND
10	NC	29	AGND
11	CH7 LO	30	CH7 HIGH
12	CH6 LO	31	CH6 HIGH
13	CH5 LO	32	CH5 HIGH
14	CH4 LO	33	CH4 HIGH
15	CH3 LO	34	CH3 HIGH
16	CH2 LO	35	CH2 HIGH
17	CH1 LO	36	CH1 HIGH
18	CH0 LO	37	CH0 HIGH
19	AGND		

16-channel single-ended mode pin out

Pin	Signal Name	Pin	Signal Name
1	+5V PC BUS POWER	20	CTR 3 OUT
2	CTR 1 OUT	21	CTR 1 CLOCK IN
3	DIG OUT 3	22	DIG OUT 2
4	DIG OUT 1	23	DIG OUT 0
5	DIG IN 3	24	DIG IN 2 / CTR1 GATE
6	DIG IN 1	25	DIG IN 0 / EXT TRIG / EXT PACER / EXT GATE
7	DIG GND	26	SS&H OUT
8	NC	27	NC
9	NC	28	AGND
10	NC	29	AGND
11	CH15 HIGH	30	CH7 HIGH
12	CH14 HIGH	31	CH6 HIGH
13	CH13 HIGH	32	CH5 HIGH
14	CH12 HIGH	33	CH4 HIGH
15	CH11 HIGH	34	CH3 HIGH
16	CH10 HIGH	35	CH2 HIGH
17	CH9 HIGH	36	CH1 HIGH
18	CH8 HIGH	37	CHO HIGH
19	AGND		

CE Declaration of Conformity

Manufacturer: Measurement Computing Corporation
Address: 10 Commerce Way
Suite 1008
Norton, MA 02766
USA

Category: Electrical equipment for measurement, control and laboratory use.

Measurement Computing Corporation declares under sole responsibility that the product

PCIM-DAS16JR/16

to which this declaration relates is in conformity with the relevant provisions of the following standards or other documents:

EU EMC Directive 89/336/EEC: Electromagnetic Compatibility, EN55022 (1995), EN55024 (1998)

Emissions: Group 1, Class B

- EN55022 (1995): Radiated and Conducted emissions.

Immunity: EN55024

- EN61000-4-2 (1995): Electrostatic Discharge immunity, Criteria A.
- EN61000-4-3 (1997): Radiated Electromagnetic Field immunity Criteria A.
- EN61000-4-4 (1995): Electric Fast Transient Burst immunity Criteria A.
- EN61000-4-5 (1995): Surge immunity Criteria A.
- EN61000-4-6 (1996): Radio Frequency Common Mode immunity Criteria A.
- EN61000-4-8 (1994): Power Frequency Magnetic Field immunity Criteria A.
- EN61000-4-11 (1994): Voltage Dip and Interrupt immunity Criteria A.

Declaration of Conformity based on tests conducted by Chomerics Test Services, Woburn, MA 01801, USA in September, 2001. Test records are outlined in Chomerics Test Report #EMI3053.01.

We hereby declare that the equipment specified conforms to the above Directives and Standards.

Carl Haapaoja, Director of Quality Assurance

Measurement Computing Corporation
10 Commerce Way
Suite 1008
Norton, Massachusetts 02766
(508) 946-5100
Fax: (508) 946-9500
E-mail: info@mccdaq.com
www.mccdaq.com